



How to add your Ultraframe buy discounts into uDesign


1. In UDesign, click on the **Settings** Tab.

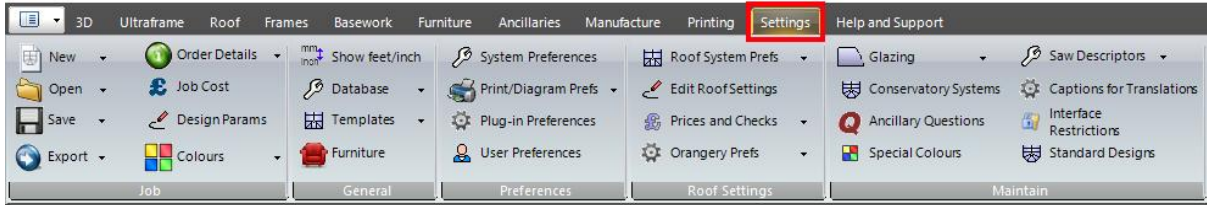

2. Click on Roof **System Prefs** and select **Ultraframe Classic**

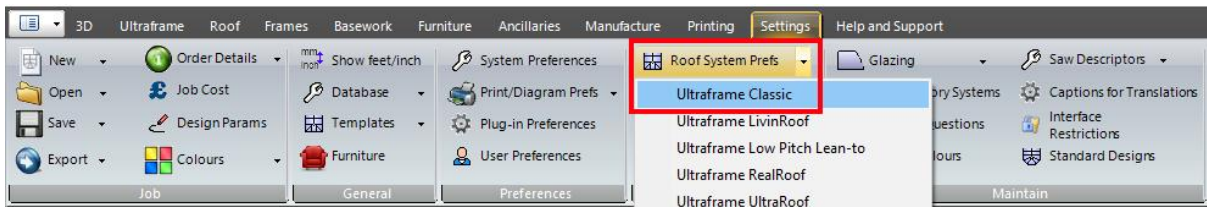


3. Select the **Roof Pricing** Tab

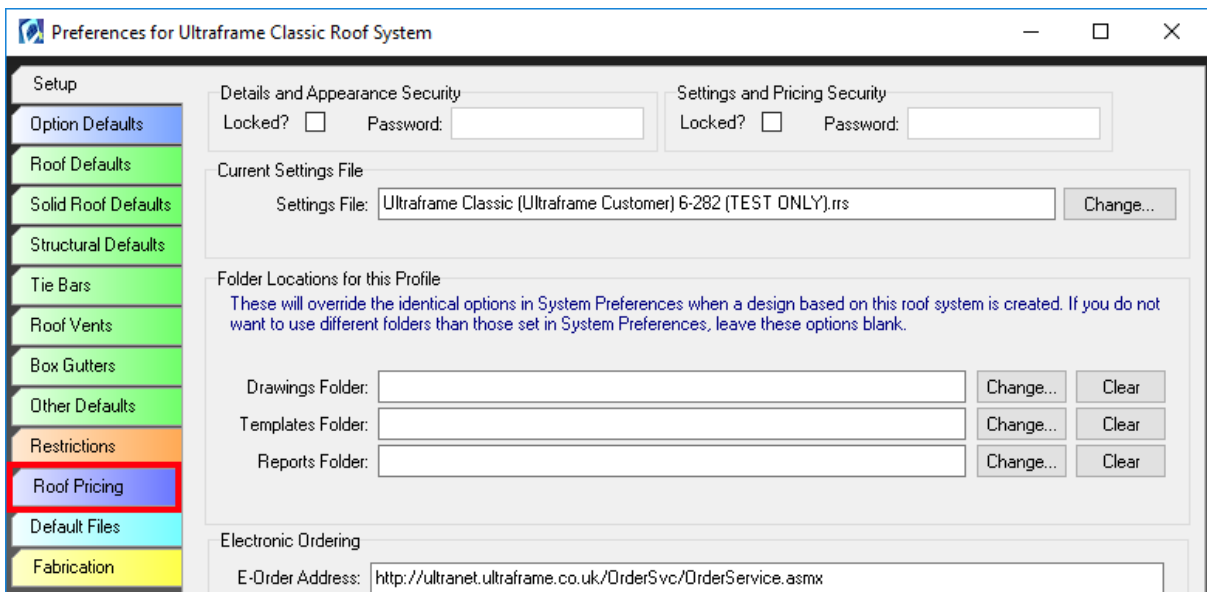


4. UDesign has two different Markup/Discount models, so you will only see one of the two screens shown below. The process however is the same, which is simply to enter the correct discount beside each applicable group label.

Old style discount mechanism

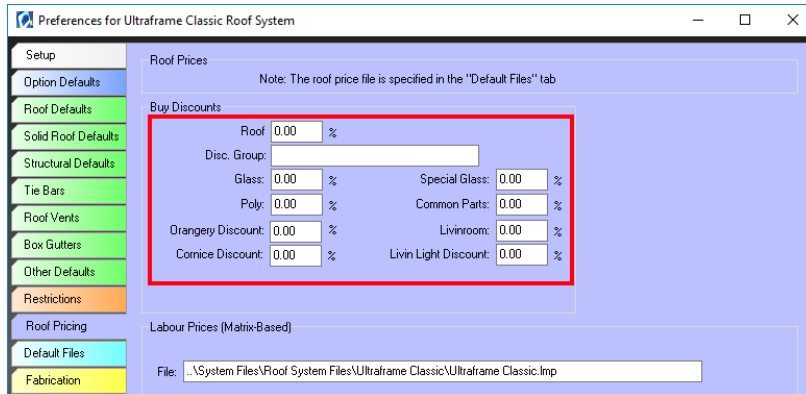

New style discount groups mechanism

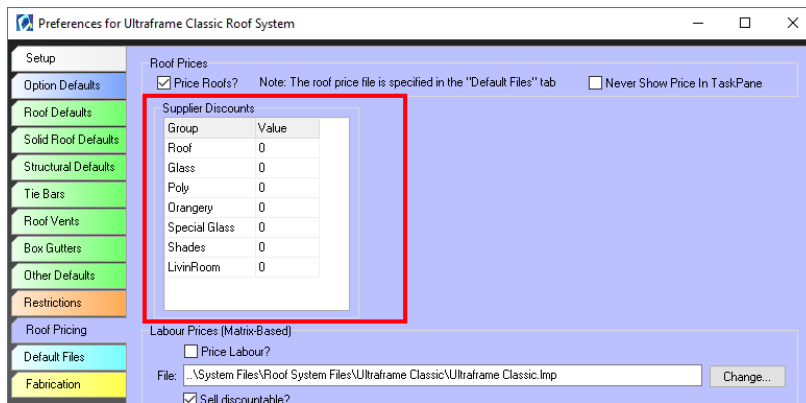

5. Repeat steps 2 through 4, for each of the other Ultraframe roof systems

